


VIP-9890-CB Quick Start Installation Guide with High Security Relay Connections

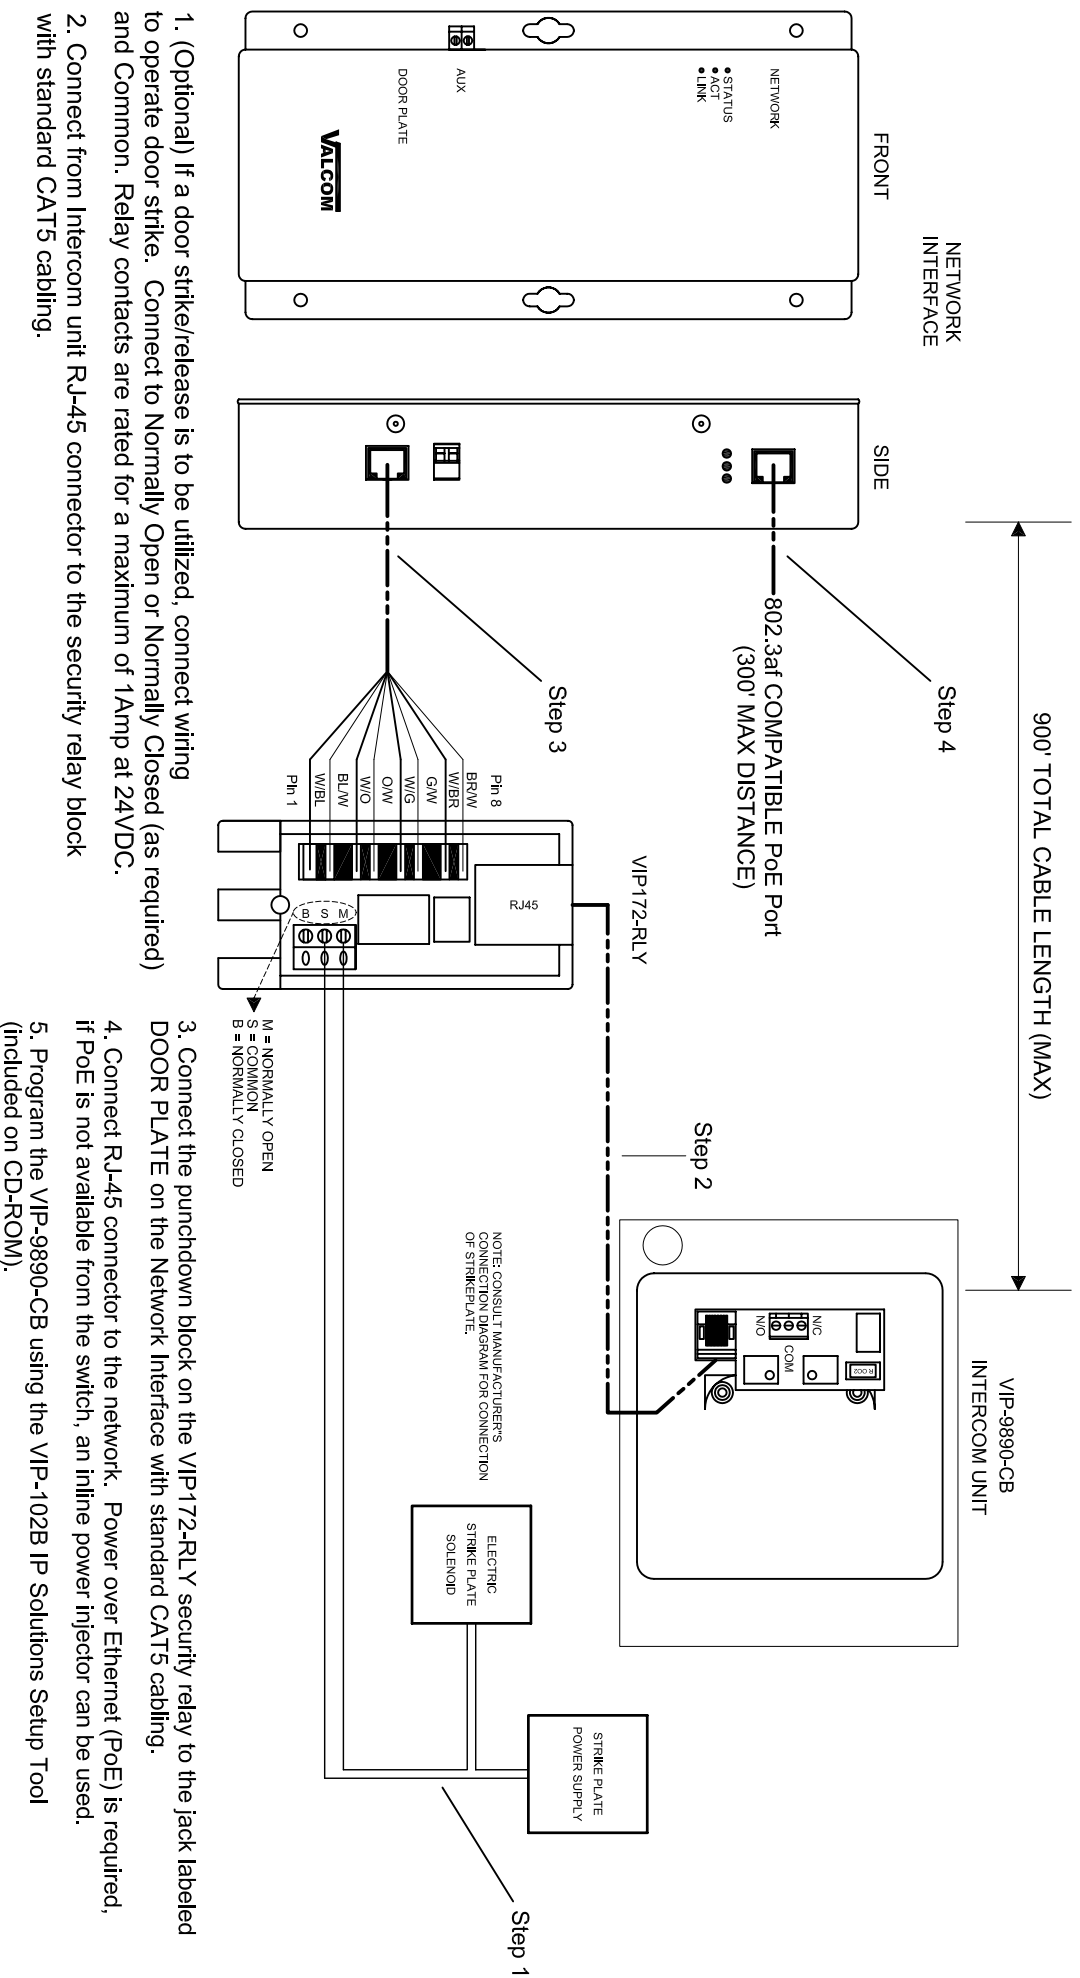

1. (Optional) If a door strike/release is to be utilized, connect wiring to operate door strike. Connect to Normally Open or Normally Closed (as required) and Common. Relay contacts are rated for a maximum of 1Amp at 24VDC.
2. Connect from Intercom unit RJ-45 connector to the security relay block with standard CAT5 cabling.

3. Connect the punchdown block on the VIP172-RLY security relay to the jack labeled DOOR PLATE on the Network Interface with standard CAT5 cabling.
4. Connect RJ-45 connector to the network. Power over Ethernet (PoE) is required, if PoE is not available from the switch, an inline power injector can be used.
5. Program the VIP-9890-CB using the VIP-102B IP Solutions Setup Tool (included on CD-ROM).