

V-1048B - 45 OHM TALKBACK HORN WITH LED V-1048C - 45 OHM TALKBACK HORN

INTRODUCTION

These instructions contain the specifications and guidelines necessary to install, operate, and maintain the V-1048B and V-1048C, 45 Ohm Talkback Horns.

The V-1048C has received FCC type KX registration, designed to be used with FCC registered Key Telephone Systems. In accordance with FCC Rules with applicable tariffs, this Paging Unit may only be installed with the authorization of the host system. Installations may be made by Valcom, Inc., an authorized agent of the same, equipment manufacturers, telephone companies, registered telephone refurbishers, and those qualified for installation of FCC registered systems under FCC Rules Section 68.215.

The FCC Registration Number, BAFUSA-69358-KX-N, will be listed in the affidavits filed with the telephone company, it will also be recorded in the system log kept by installation and maintenance personnel. The local telephone company is to be notified of the FCC Registration Number when this Paging Unit is installed.

SPECIFICATIONS

Applications

The V-1048B and V-1048C talkback horns are designed to be used with "handsfree" talkback control units. In combination with these units, the speakers provide both loudspeaker and talkback functions.

A standard talkback paging system is comprised of three basic components:

1. Talkback Page Control Unit
2. Speakers
3. Power Supply

Consult your Valcom distributor for assistance in selecting a control unit and power supply.



Features

- 45 Ohm input impedance
- Easy connection using twisted cabling
- Universal mounting base
- LED lamp provided to indicate when speaker is in active mode (V-1048B only)

Nominal Specifications

- Input Impedance: 45 Ohm

Dimensions & Weight

- 7.4" H x 10.0"W x 10.4"D
(18.8cm H x 25.4cm W x 26.4cm D)
- 3.4 lbs. (1.5kg)

Environment

- Temperature: -20 to +55°C
- Humidity: 0-95% non-precipitating

Limitations


- Two talkback speakers maximum per zone
- 800 feet maximum cable length to speaker
NOTE: Do not split pairs to speakers.
- Do not use talkback in noisy areas (80 dB or greater)

Coverage

The distance you can be away from a speaker and still have good talkback depends on the type of speaker and ambient noise level.

The speaker should be as close as possible to the area where talkback is desired. It should not be mounted close to, or pointed at, noise producing equipment such as fans, air conditioners, machinery, or compressors.

The chart below shows maximum talkback distances relative to the noise level of the surroundings.

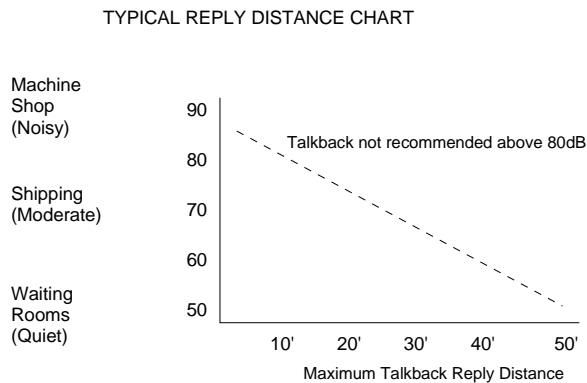

Remember: The speaker is no better than your ears. If you can not carry on a conversation at normal voice levels over the required talkback distance, then talkback page equipment will not function satisfactorily.



INSTALLATION

Cabling

Connections should be accomplished using regular twisted pair wiring. Do not split pairs.

Connections

Connect station or other suitable wire to leads as follows:

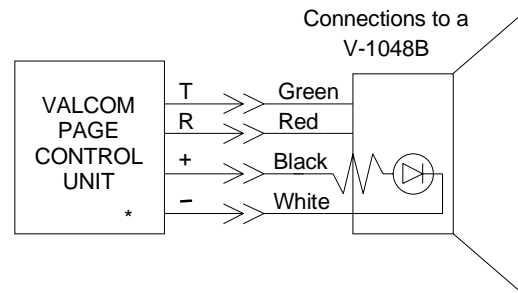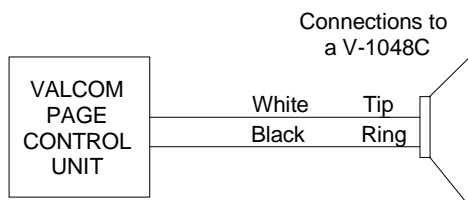

* This is switched battery supplied by page control unit.

Attaching Speaker to Base

NOTE: For ease of installation, the base can be attached to the speaker before or after the base is mounted.

- Loosen position adjustment knob
- Insert the ball of the base into the socket of the speaker
- Tighten the position adjustment knob

Mounting

Mount the horn to a suitable surface using the hardware provided. These units can be mounted to a wall, a beam, or an electrical box.

- Mount the base to a wall using the two holes provided. Knockout holes are provided for punch out should additional holes be desired.
- A "C" clamp is provided with the horns to allow mounting to a beam. Place the bolt through the hole in the bottom of the base to secure the "C" clamp to the beam (See Figure 1). It is suggested that the horn be mounted to the underside of the "I" beam to provide maximum positioning adjustments.
- Connection to an electrical backbox is accomplished by channeling wire through the ball of the base and making appropriate connections. The base has holes punched for a double-gang square box, but by punching out additional knockout holes, the base can be mounted to a single-gang or octagon box (See Figure 2).

The horns may be rotated or moved up and down to obtain the desired position by loosening the knob at the bottom of the unit approximately one turn (See Figures 1 & 2). Make required adjustments and re-tighten knob.

TECHNICAL ASSISTANCE

When trouble is reported, verify there are no broken connections leading to the unit.

Assistance in troubleshooting is available from the factory. When calling, you should have a VOM and a telephone test set available and be calling from the job site. Call (540) 563-2000 and press 1 for Technical Support, or visit our website at <http://www.valcom.com>.

Valcom equipment is not field repairable. Valcom, Inc. maintains service facilities in Roanoke, VA. Should repairs be necessary, attach a tag to the unit clearly stating company name, address, phone number, contact person, and the nature of the problem. Send the unit to:

Valcom, Inc.
Repair and Return Dept.
5614 Hollins Road
Roanoke, VA 24019-5056

TROUBLESHOOTING CHART

PROBLEMS	PROBABLE CAUSES AND CORRECTIONS
No Sound in Page Mode	<ol style="list-style-type: none"> 1. Check tip and ring for audio at speaker. 2. Check tip and ring at control unit.
Low Sound in Page Mode	<ol style="list-style-type: none"> 1. Check volume controls at page control.
Poor Listening in Talkback Mode	<ol style="list-style-type: none"> 1. Check talkback volume controls at page control. Set control at minimum suitable listening level.
No LED Indication (V-1048B only)	<ol style="list-style-type: none"> 1. Check presence and polarity of LED input signal.

VALCOM LIMITED WARRANTY

Valcom, Inc. warrants its products only to the original purchaser, for its own use, to be free from defects in materials and workmanship under conditions of normal use and service for a period of one year from the date of shipment. This Limited Warranty obligation shall be limited to the replacement, repair or refund of any such defective device within the warranty period, provided that:

1. inspection by Valcom, Inc. indicates the validity of the claim;
2. the defect is not the result of damage, misuse or negligence after the original shipment;
3. the product has not been altered in any way or repaired by others and that factory sealed units are unopened (a service charge plus parts and labor will be applied to units defaced or physically damaged);
4. freight charges for the return of products to Valcom are prepaid;
5. all units 'out of warranty' are subject to a service charge. The service charge will cover minor repairs (major repairs will be subject to additional charges for parts and labor).

This Limited Warranty is in lieu of and excludes all other warranties, expressed or implied and in no event shall Valcom, Inc. be liable for any anticipated profits, consequential damages, loss of time or other losses incurred by the buyer in connection with the purchase, operation, maintenance, installation, removal or use of the product. The maximum liability of Valcom under this warranty is limited to the purchase price of the specific Product covered by the warranty.

Disclaimer. Except for the Limited Warranty provided herein, the product is provided "as-is" without any warranty of any kind whatsoever including, without limitation, any **WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT.**

This warranty specifically excludes damage incurred in shipment. In the event a product is received in damaged condition, the carrier should be notified immediately. Claims for such damage should be filed with the carrier involved in accordance with the F.O.B. point.

Headquarters:

Valcom, Inc.

5614 Hollins Road Roanoke, VA 24019-5056

Phone: (540) 563-2000 FAX: (540) 362-9800

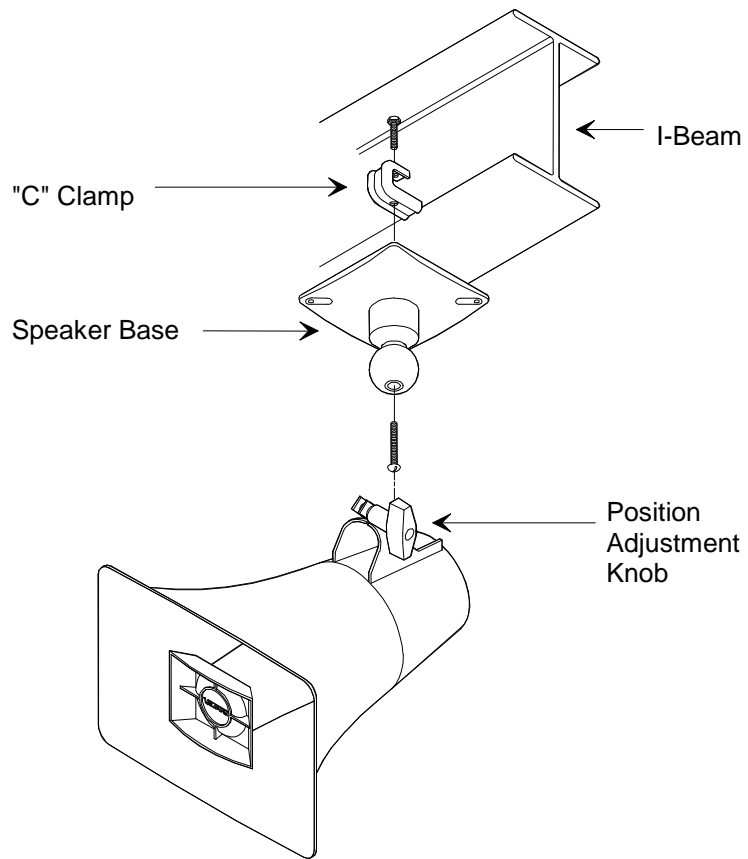


Figure 1 - Mounting to a Beam with a "C" Clamp

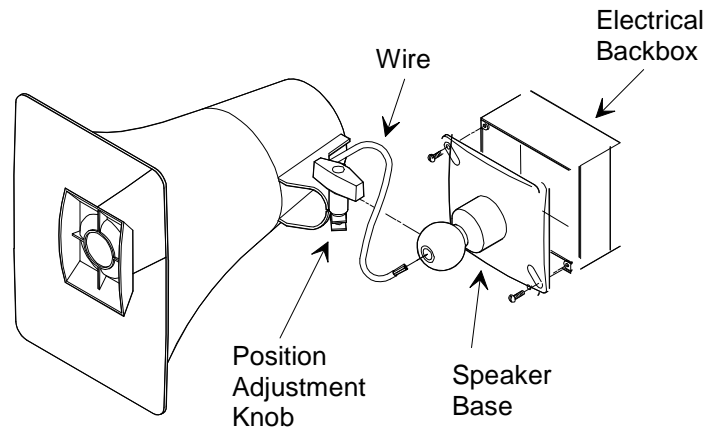


Figure 2 - Mounting to an Electrical Backbox