





**Settings** – Care should be exercised in editing your settings to ensure continued receipt of alerts and notifications; access with <Edit>

**Alert Settings** are user pre-determined values for when, where, and how VEEWS earthquake alert messages will be played on-premise

**Group:** Group Code (typically an “Emergency All Call”) for endpoint mechanisms (audio and visual) to activate upon VEEWS receiving **ShakeAlert**® data meeting *Intensity Threshold* criterion

**Priority:** Priority at which VEEWS alert mechanisms will activate; default is 97, meaning VEEWS will overtake all other messages below this priority value

**Intensity Threshold:** \*NOT MAGNITUDE\*, this is the anticipated shaking for the event from **1** (Not felt-no damage) to **10** (Extreme-very heavy damage) determined by the Modified Mercalli Intensity Scale; default value is 4 (light shaking); alerts at/above this value will play

**Service Settings** are user pre-determined values for service notifications (Up/Down); sent within 15 min. of status change; repeated hourly until restored

**Group:** Group of on-premise endpoint mechanisms (audio and visual) to broadcast service status alerts (typically Administrative, Security, and/or IT offices)

**Priority:** User pre-determined priority at which service notifications will play, default is 96; overtaking all messages below this priority value

**Email:** Address to receive service status notification emails; only one address allowed; recommended to use a group email alias

**SMS Number:** 10-digit number to receive status notification text messages; only one SMS number allowed

## Additional Features

**Edit:** Opens access to Alert Settings, Service Settings, and Advanced Settings

**Local Test:** Test to ensure that identified Alert Settings-Group Code *broadcasts a simple, local test message*, as intended, on-premises

**Remote Test:** Test to ensure messages are received and *played from VEEWS cloud-service*, through identified Alert Settings-Group Code; also useful for earthquake drills

**Stop Test:** This button cancels a Local or Remote Test that is in progress

**Reset Account:** \*EXERCISE CAUTION\*, this functionality will disable VEEWS, clear all user determined settings, and require an Activation Key to restart service

**Advanced:** This functionality is under development at this time. To learn more, contact [earthquake@valcom.com](mailto:earthquake@valcom.com); access with <Edit>

**Education & Training Resources:** A link to just-in-time resources for implementing VEEWS service and training those who will receive early warnings to respond properly