

V-400 DYNAMIC DESK PAGING MICROPHONE

INTRODUCTION

These instructions contain the specifications and information necessary to install, operate and maintain the V-400 Dynamic Desk Paging Microphone.



SPECIFICATIONS

Applications

- Valcom Paging Systems

Features

- Dynamic element
- Omnidirectional pickup pattern
- Cyclac housing with die cast base
- Push to Talk push bar with lock
- Heavy duty four conductor shielded cable
- Low impedance (balanced)

Dimensions/Weight

- 9.4"H x 4.0"W x 6.0"D
(23.9cm H x 10.2cm W x 15.2cm D)
- 1.4 lbs. (0.64 kg)

Specifications

- | | |
|--------------------|---------------------------|
| • Element | Dynamic |
| • Pattern | Omnidirectional |
| • Freq. Response | 50 to 12KHz |
| • Output Impedance | Lo Z, 400 Ohms |
| • Output Level | Lo Z, -58dB |
| | (0dB = 1 mw/10 microbars) |
| | -152dB EIA |

TECHNICAL ASSISTANCE

Assistance is available from the factory when problems are encountered. Call (540) 563-2000 and press 1 for Technical Support or visit our website at <http://www.valcom.com>.

Valcom equipment is not field repairable. Valcom, Inc. maintains service facilities in Roanoke, VA. Should repairs be necessary, attach a tag to the unit clearly stating your company name, address, phone number, contact person and the nature of the problem. Send the unit to:

Valcom, Inc.
Repair and Return Dept.
5614 Hollins Road
Roanoke, VA 24019-5056

INSTALLATION

Figure 1 shows the V-400 connected to the Valcom V-9939C microphone adapter.


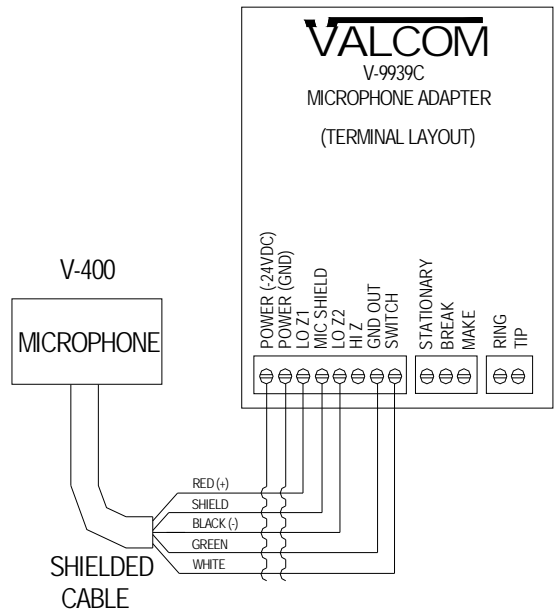


FIGURE 1. CONNECTING ARRANGEMENT

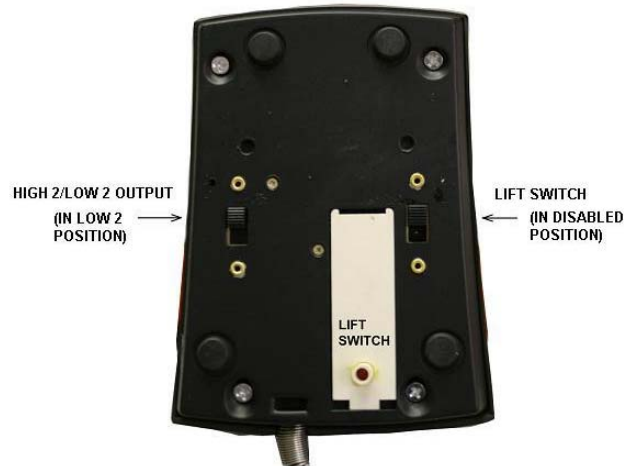

Lift Switch: When the Lift Switch is enabled, the microphone becomes active when lifted, without regard to the push-to-talk switch position. When the Lift Switch is disabled, the push-to-talk switch must be depressed to active microphone.

High Z / Low Z output: Default position - Low Z. High Z is utilized when two-wire connection is necessary or when utilized with legacy amplifiers.

FIGURE 2 - SWITCH FUNCTIONS

VALCOM LIMITED WARRANTY

Valcom, Inc. warrants its products only to the original purchaser, for its own use, to be free from defects in materials and workmanship under conditions of normal use and service for a period of one year from the date of shipment. This Limited Warranty obligation shall be limited to the replacement, repair or refund of any such defective device within the warranty period, provided that:

1. inspection by Valcom, Inc. indicates the validity of the claim;
2. the defect is not the result of damage, misuse or negligence after the original shipment;
3. the product has not been altered in any way or repaired by others and that factory sealed units are unopened (a service charge plus parts and labor will be applied to units defaced or physically damaged);
4. freight charges for the return of products to Valcom are prepaid;
5. all units 'out of warranty' are subject to a service charge. The service charge will cover minor repairs (major repairs will be subject to additional charges for parts and labor).

This Limited Warranty is in lieu of and excludes all other warranties, expressed or implied and in no event shall Valcom, Inc. be liable for any anticipated profits, consequential damages, loss of time or other losses incurred by the buyer in connection with the purchase, operation, maintenance, installation, removal or use of the product. The maximum liability of Valcom under this warranty is limited to the purchase price of the specific Product covered by the warranty.

Disclaimer. Except for the Limited Warranty provided herein, the product is provided "as-is" without any warranty of any kind whatsoever including, without limitation, any **WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT.**

This warranty specifically excludes damage incurred in shipment. In the event a product is received in damaged condition, the carrier should be notified immediately. Claims for such damage should be filed with the carrier involved in accordance with the F.O.B. point.

Headquarters:
 Valcom, Inc.
 5614 Hollins Road Roanoke, VA 24019-5056
 Phone: (540) 563-2000 FAX: (540) 362-9800